

Debitek Cash Register Interface System Configuration and Programming Steps

Your Debitek system will not work unless you follow all of these steps. Complete the Configuration Steps first; then complete the Programming Steps. Remember to download any reports stored on the data collector before you begin.

CONFIGURATION STEPS

1. Connect the data collector to the back of the card reader in the debit card terminal (DCT).
2. Press [ON/CLEAR].
3. Wait for the main menu to appear on the data collector display.
4. Press [C] to select the CONF functions.
5. Wait for the CONF screen to appear on the data collector display.
6. Press [U] to select the UNIT TYPE functions.
7. Use the UP and DOWN arrow keys to find the words CASH REGISTER.
8. Press [EXE].
9. Determine what model of cash register you have.
10. Use the UP and DOWN arrow keys to find the words that describe your model of cash register.
11. Press [EXE].
12. OPERATION MODE: appears on the data collector display. Use the UP and DOWN arrow keys to choose CASH AND CARD, CARD ONLY, or CASH ONLY.
 - If you choose CASH ONLY, your cash register interface system will not accept cash cards. If you choose CARD ONLY, split tendering may not be possible.
13. Press [EXE].
14. CARD MAXIMUM: appears on the data collector display. Type in the Card Maximum value.
 - The Debitek system will return any cash cards that have higher balances than the card Maximum value.
15. Press [EXE].
16. Press [S] to select SITE CODE # functions.
17. NUMBER OF SITE CODES: appears on the data collector display. Type in the number of Site Code #s used in your facility.
18. Press [EXE].
19. SITE CODE #1: appears on the data collector display. Type in the first Site Code # for your facility.
20. Press [EXE].

21. DISCOUNT LEVEL 1:1 appears on the data collector display. Type in the discount level assigned to the last Site Code # you entered.
 - If you leave the discount level at 1, the discount extended to the Site Code # will default to 0%.
 22. Press [EXE].
 23. Follow steps 16 - 19 until all of the Site Code #'s and corresponding discount levels for your facility have been programmed.
 24. Press [ON/CLEAR].
 25. Press [L] to select the LOCATION functions.
 26. LOCATION: appears on the data collector display. Type in the location of the machine.
 - You may type in up to 48 alphanumeric characters.
 27. Press [EXE].
 28. Press [A] to select the ASSET functions.
 29. ASSET NUMBER: appears on the data collector display. Type in the asset number of the vending machine.
 - You may type in up to 8 alphanumeric characters.
 30. Press [EXE].
 31. Press [ON/CLEAR].
 32. Press [Y].
-

PROGRAMMING STEPS

- If you have just completed Configuration Steps, go to Step 4.
1. Connect the data collector to the back of the card reader.
 2. Press [ON/CLEAR].
 3. Wait for the main menu to appear on the data collector display.
 4. Press [P] to select the PROG functions.
 5. Wait for the PROG screen to appear on the data collector display.
 - PRICES programming is not required for a cash register interface system.
 6. Press [I] to select the IDLE-MSG functions.
 7. IDLE MESSAGE: appears on the data collector display. Type in the idle message.
 - Use the Idle-msg form found in your Debittek Users Manual.
 8. Press [EXE].
 9. Press [ON/CLEAR].
 - If you are planning to give discounts to the Site Code #'s in your facility, go to Step 10. If not, go to Step 14.
 10. Press [D] to select the DISCOUNTS functions.

11. DISCOUNT1: 0% appears on the data collector display. Type in the discount percentage extended to all Site Code #s at discount level 1.
 - Discount levels were programmed with the Site Code #s. You may program a maximum of 4 discount levels.
12. Press [EXE].
13. Follow Steps 11-12 until all 4 discount levels have been programmed.
 - If you are not using all of the discount levels, program the remaining levels at 0.
14. Press [ON/CLEAR].
15. Press [ON/CLEAR].
16. Press [Y].
17. Press [O].
18. Disconnect the data collector from the card reader.