

# PROGRAMMING A SMART VEND GANG CONTROLLER

1. Connect copy protection cable to Palm serial cable and palm pilot
2. Load the Palm application
3. Click Start
4. Click **Configuration**
5. Under the Config Family & Types screen select Vending and Laundry Controller
6. Click Next
7. Under the Config Location screen enter the Location number and ID number in the Asset # screen, set Multivend to Off
8. Click Next
9. Under the Config Misc screen enter in a maximum card value of \$50
10. Click Next
11. Under the Config Sitecodes screen enter in the number of site codes and enter the individual site codes
12. Click Next
13. Under the Config Machine List select Add Machine
14. Under the Config Machine Type select the Type of machine, the I/O Channel the machine is connect to, "usually #1". Next verify the correct machine Number which is preselected starting at 11. Enter the number of Pulses that are needed to start the machine.
15. Click Next
16. Repeat steps 13 – 15 for additional machines.
17. When completed adding machines select Next
18. Click Done and Continue to send data.
19. Select **Programming**
20. Program Prices will be displayed, enter the prices for the washers and dryers, make sure there is a price for each machine listed.
21. Click Next
22. Program Discounts will be displayed, make sure this screen is all at 0%
23. Click Next
24. Program Specials will be displayed, make sure all are Inactive and 0%
25. Click Next
26. Program Idle Message will be displayed, select Custom on the top of the screen and enter on Line 1 "INSERT YOUR CARD".
27. Click Next
28. Program Reader Time will be displayed, click Set Reader Time and then OK
29. Click Next
30. Click Done and Continue to send data.
31. Click on **Reports**
32. Click Read and a report will be listed with a report number, date, time and asset #.
33. Click Done and click on Home to exit the program, your configuration should be complete with a first collection report downloaded to the Palm device.